



i9100 Smart POS Payment Terminal Quick Start Guide

Unpacking

- Carefully remove all protective material from the i9100 and save the shipping container for later storage and shipping .
- Verify that the following were received.

- Quick start guide x1
- Power adapter x1
- USB data cable x1
- i9100 Smart POS x1
- 5800mAh Lithium-ion battery

3. Inspect the equipment for damage. If any equipment is missing or damaged, contact the local service center immediately.

4. Prior to using the i9100 for the first , remove the protective shipping film that covers the display window.

Appearance and Buttons

Front view



● RED:Charging

● GREEN:Charging completed/Running

Back view



Side view



Contactless card reader



Thermal Printer

IC card reader



Features

Power button: Turns the display on and off. Press and hold to reset the device, power off or swap battery.

Speaker: Provides audio out put for video and music playback.

Touch screen: Displays all information needed to operate

Battery connector: Pull up to remove the battery

Notification LED: Indicates system status while application generated notifications(programmable).

Charging LED: Indicates battery charging status while charging.

Camera: Takes photos and videos.

Camera Flash: Provides illumination for the camera.

Volume Button: Increase and decrease audio volume

Contactless card reader: Provides communication with Contactless IC cards.

IC Card reader: Read the chip-based bank cards

Magnetic Stripe Card Reader: Read the Magnetic stripe cards.

Printer: Thermal paper printing


Forced restart: Press and hold the 'Power button' at least 8 seconds .

Indicators

Battery		Power high/AC adaptor Connected without battery inside
		Power medium
		Charging while Battery is medium or low
Network signal strength		Power low
		Good signal
		Fair signal
		No sim card
		Sim card error/No service
WiFi		WiFi on but not connected any WiFi network
		WiFi ON and connected
		WiFi off

Setup your Device

Installing a SIM/microSD Card

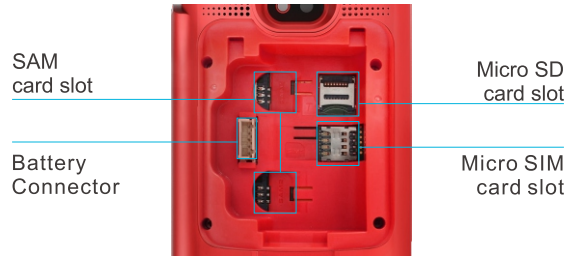

MicroSD Card : The microSD card slot provides secondary non-volatile storage. The slot is located under the battery pack. Refer to the documentation provided with card for more information. And follow the step showed below:

- 1.Open the microSD card holder
- 2.Lift the microSD card holder.
- 3.Place the microSD card into the card holder with contacts facing down.
- 4.Close the microSD card holder .
- 5.Slide the microSD card holder to the lock position.

SIM/SAM: Only use a micro SIM card or standard SAM card

1. Slide the SAM/Micro-SIM Card into the corresponding slots with contacts facing down.
2. Press and pull the card to remove.



Note:

Overexertion should be avoided when installing or removing the card.

Installing the Media Roll



- 1.Open the Media Cover.
- 2.Load the Media roll, note direction media pulled off the roll.
- 3.Pull Media out of the printer
- 4.Close the Media Cover.

Magnetic Stripe Card Operating Instructions

Insert and swipe magnetic strip card smoothly.



Contact IC Card Instructions

Insert IC card into the device gently with metal contact upward. Overexertion should be avoided when installing or removing the card.



Contactless IC Card Instructions

Tap Contactless card near the contactless card reader.



Device Care & Maintenance

Read all information before using the device to ensure safe and proper operation. Following are the warning information provided below to prevent incidents such as fire or explosion.

Warning

- Using unapproved power source, charger or battery may cause fire, explosion or other risks.

- Please use the accessories approved by manufacturer and corresponding to this model.

- Please charge device by standard charger of the manufacturer.

Using other chargers may cause electrical leakage, fire, or damage to equipment and chargers.

- If charging is completed, remove the charger from the device and unplug the charger from the power outlet. Do not charge more than 12 hours.

- Do not expose to physical impact or damage.

- Do not use outdoor during a thunderstorm.

- Turn off the device before storage to prevent the battery to be completely drained during the storage.

Do not expose to high temperatures, battery overheating may cause an explosion.

- Do not use the battery if the battery appears discoloration, deformation, abnormal heating, expansion and other phenomena.

- Stop using and disconnect all connections to other devices or cables before cleaning and maintaining the equipment.

- Do not touch the device with wet hands. Also, do not use the device in humid environments, such as rest rooms, or during water-base activities, such as swimming.

- It is recommended to use your device at temperature between 5 ~35°C (41~95°F) .

- Do not store the device near or in heaters, microwave, cooking equipment, or high pressure containers.

- Keep the device dry.

- Do not use the device in the environment of potential explosion risk (including the gas station, below the deck of the ship, near the transportation or storage facilities of fuel or chemicals, and the area in the air containing chemicals or grains, metal powder and other particles).

Children

- 1) Do not allow children or pets to bite or suck the device.
- 2) Do not poke eyes,ears, or other body parts with the device or insert the device into the mouth.
- 3) If the device has a camera flash, do not use it close to the eyes of people or animals.

Transport Precautions


Do not transport the battery at ambient temperature higher than 65°C(149 ° F).

Please keep device and battery separately during storage
Pack with battery with appropriate packing materials.

Liability Disclaimer

UROVO Technologies takes steps to ensure that its published Engineering specifications and manuals are correct ,however, error do occur. UROVO Technologies reserves the right to correct any such errors and disclaim liability resulting therefrom.

Return & Recycle

 This marking on the product accessories or literature indicates that the product and its electronic accessories (such as charger) should not be disposed with other household waste.

 This product is ROHS compliant.

Help&Support

 EMAIL US AT tech@urovo.com

 CALL US ON +86-755-22673926

 www.urovo.com/en

 Floor 36,Hitech Zone Union Tower,No.63 Xuefu Road,
Nanshan District,Shenzhen,China